 




Instrution Manual





- 1 Power Switch: dial switch to "ON" to turn on the player, dial switch to "OFF" to turn off the player. If do not use it for a long time, please turn off the power in order to extend the usage of Your player.
- 2 MI/II Button: While in audio playing status, press once to stop play, and press again to return to playing mode.
- 3 EQ: normal/rock/pop/classical/soft/heavy bass/jazz/SRS WOW 8 kind of EQ
- 4 MODE button: Press 'M' button, to switch among the USB mode, Micro SD mode, FM mode and AUX mode.

 Note: If USB drive or Micro SD card is not plugged in, the corresponding Mode will be
 - eliminated automatically by programme from above four modes.
- 5 M4 VOL-:play the last music when at card reader mode, last station when at FM mode. Press and hold the button to make the volume down.
- 6 M VOL+: play the next music when at card reader mode, next station when at FM mode Press and hold make the volume up.
- 7 USB port: insert USB memory drive containing supported audio file.
- 8 Memory card socket:support Micro SD card.
- 9 FM radio: insert USB cable with its MINI USB port only into the player, short press M key switch to FM mode, short press play/pause key auto search and save FM channel signals; after searching press play/pause key again, it will play received FM channels, press upwards/downwards to last/next channel.

10 DC-5V LINE IN: DC 5V power input interface, external audio input interface AUX IN: Connect the accompanied USB cable with the player by its MINI USB head, and attach 3.5mm audio plug to other audio output device, the player can be the player into that device, an external speaker.

To Charge the player: Turn off the player, connect the USB cable with the player by its MINI

USB head, and plug the left USB head into the computer's USB port or USB adapter.

Charging time for the player is 3 hours – Before using for the first time, be sure to charge for full 3 hours.

Note: To extend lifetime of Your player, make sure charge the battery at least once every 3 month if not use.

- Main Features:

 1. Audio playback function, audio format: MP3,WMA, etc
 2. Support USB drive (up to 16GB)
 3. Support Micro SD card (up to 8GB)

- High quality speaker
 Built-in rechargeable lithium battery

₩.

FM radio
 The audio input function

Technical specifications:

Audio playback	Maximum output	4Ω3W
	MP3 bit rate	64Kbps to 320Kbps
	WMA bit rate	64Kbps to 384Kbps
	Response frequency	150Hz-18KHz
	SNR	≥80dB
	THD	0.03%
Using temperature	-5℃ to 40℃	

Note: Acutal product specifications and images may vary from those found in this document.

96mm